

TiVo® Remote Control

The TiVo button takes you to the TiVo Central® screen, the starting point for all your TiVo features and settings.

If programmed, TV PWR turns your TV on or off.

Use Input to select the input (such as TiVo box, DVD player, game system) your

Back goes back to the previous screen (in certain

Guide takes you to the program guide, where you can find shows to watch or record. Press it again to see

If programmed, Volume and Mute control the volume on your TV or A/V receiver.

Use the Thumbs Up and Thumbs Down buttons to rate shows, collections, or video providers for TiVo

Play starts playing a show from the My Shows list.


Rewind rewinds a show. Press it up to three times for

Replay repeats the last eight seconds of the show. Press and hold to jump to the beginning of a show.

The A B C D buttons sort and filter views. Look for the onscreen tips.

Slow plays a show in slow motion.

Clear removes the display of the info banner or program guide, and deletes titles from the My Shows or

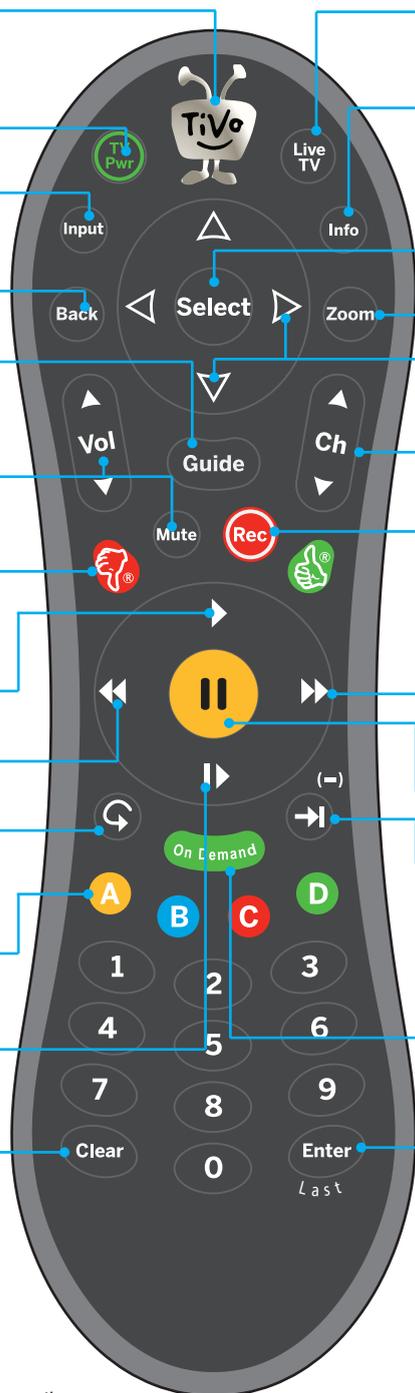

Live TV takes you to live TV. If you're watching live TV, use it to cycle through the

Info shows the info banner while watching live TV; press it again to make it disappear.

Press Select to choose menu items or, when watching live TV, to bring up

Use Zoom to change aspect ratio of shows on your TV.

Use the Arrow Buttons to navigate the TiVo menus and the program guide.

Use the Channel Up/Down buttons to change the channel and to page up or down while in the program

Press Record to start recording the show you're watching, or to set up a recording for a show

Fast-Forward fast-forwards through a show. Press it up to three times for three

Pause freezes a show. Press it again to resume

Advance moves forward in 30-second increments; press and hold to jump to the end of the show. Or, press Advance to jump to the next tick mark when

On Demand takes you to the main screen for video-on-demand options.

Enter/Last returns you to the last channel tuned to in

To program your TiVo remote, press the TiVo button to go to the TiVo Central screen. Then select Settings & Messages, then Settings, then Remote, CableCARD, & Devices, then Remote Control. Follow the easy on-screen instructions.

Use these shortcuts to help you navigate to your favorite TiVo features quickly!
First press the TiVo button on your remote and then press:

- 0 - Show the TiVo introduction animation
- 1 - Season Pass Manager
- 2 - To Do List
- 3 - WishList Search
- 4 - Search
- 5 - Browse TV & Movies

Advance - Goes to bottom of a menu list

Channel Up/Down - On menus with more than one screen, this will page up or down one screen at a time.

For more remote control tips visit tivo.com/remotecontrol